

Wedderburn

Since 1896.



Compact Semi-Automatic Weigh Wrap Price Labeller

AW5600CPSA2



AW5600CPSA2 Compact Semi-Automatic Weigh Wrap Price Labellers save precious floor space whilst meeting the high demands of efficient food weighing and packing operations.

The AW5600CPSA2 delivers fast accurate semi-automatic weigh labelling, and the newly enhanced sealing system means the wrapping finish is even better than in previous models, resulting in superior on-shelf food presentation & hygiene.

NMI approved for trade use in Australia, and with an impressive weigh-wrap-labelling speed of up to 30 packs per minute, this compact wrapper is certain to enhance operations where accurate weighing, packing and pricing is required.

15" Large full colour touch screen


▲ User-friendly operator screen improves efficiency

Preset and frequently used function keys can be assigned for quick access. Size, colour and location can be changed to suit your operation.

Label content can be previewed on the display prior to printing to prevent labelling errors.

Extremely large memory easily supports an ever-increasing need for print items.

The screen angle is adjustable to ensure good viewing for all operators and lighting conditions.

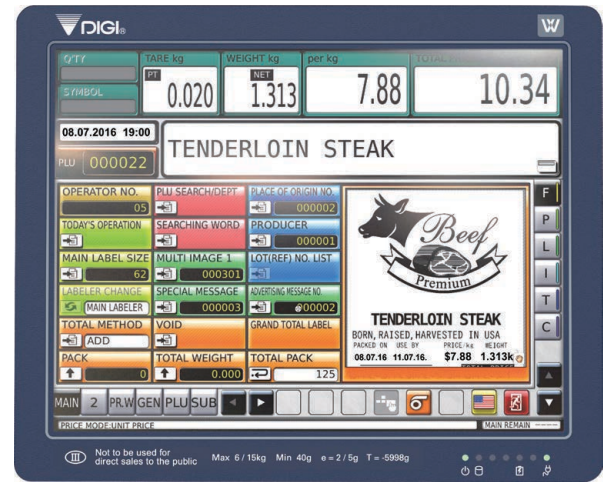

More attractive & hygienic packaging

▲ Newly enhanced sealing system and rotating labeller arm improve presentation

The AW5600CPSA2 features an enhanced sealing system and newly designed labelling arm for automatic label placement.

Together these features deliver a truly superior packaging finish with tight clean wrap and accurately positioned labels, all of which create greater consumer appeal and confidence in the quality of your product.



Featuring Linerless Labelling

A new dimension for backroom operations.
Eliminate liner waste, increase flexibility and profit

▲ No more wasted white space on big labels

The auto-label-sizing feature eliminates unused space on the label and automatically adjusts the label size. This reduces the label cost and makes labels more attractive.

▲ Increased flexibility in label format

The auto-cut feature cuts from a continuous strip of linerless labels every time a label is printed. Variable label layouts and sizes can be printed from a single cut.

▲ No more label lining to dispose of

The elimination of backing paper for labels means no liner to dispose of which improves your environmental footprint.



Smarter Labelling & Improved Productivity

▲ New 80mm width 300dpi thermal head

The new 300dpi thermal head enables clear and crisp label printing for enhanced consumer appeal. The 80mm print width allows more information to be included on labels so that labelling regulations are met while still keeping attractive advertising messages.

▲ Easy label change

The AW5600CPSA2 has a very simple spooling structure for the label roll. This allows for quick, easy exchange of label rolls in the front-loading labeller.

▲ High Productivity

Weighing, wrapping, and price labelling is automatically done in one pass at an impressive speed of up to 30 packs per minute. In addition to enhanced shelf appeal and hygiene, the superior quality of wrapping and labelling results in less goods needing to be repacked or returned due to leakage.



AW5600CPSA2 Features Overview

- NMI approved for trade use
- small footprint that saves valuable floor space
- easy to use with large 15" full colour touch screen and on-screen help messages
- capable of wrapping trays up to 130 mm high
- wrapping speed up to 30 packs per minute
- wide 300dpi thermal head allows more detail to be printed on labels up to 80mm wide
- film loading is fast and easy
- engineered to use new environmentally conscious linerless labels
- free-layout function keys allow users to customise the key layout
- fast PLU file communication via Ethernet
- contact parts such as the weighing platter can be easily accessed and removed for thorough cleaning so that excellent hygiene standards can be maintained
- optional wireless RF communication for a cable-free environment
- optional second and third labeller heads

Specifications may change without notice.

Phone: 1300 970 111

enquiries@wedderburn.com.au

www.wedderburn.com.au


Packaging Equipment.

Wedderburn®
Since 1896.


Labels. Labelling Equipment. Packaging Equipment. Weighing Scales.
POS Systems. Food Equipment. Maintenance & Repairs. Hire.

SPECIFICATIONS & DIMENSIONS


Capacity:	6 / 15kg x 2 / 5 g (multi-interval)	
Package Size (mm):	130 - 350 wide 10 - 130 high 80 - 230 deep the maximum combination of the above dimensions is not available and the available package size depends on the film width.	
Wrapping Speed:	max. 30 packs per minute	
Number of Film Rolls:	One	
Film Width (mm):	300 - 500	
Label Type :	Thermal Paper/Die Cut	Thermal Paper /Linerless
Label Width (mm):	25-80mm	44-59mm
Label Length (mm):	20-150mm	20-500mm (300mm is printable)
Display Panel:	15 inches TFT colour	
Keypad:	Pictogram or English	
Programmable Items:	PLU no., commodity name, ingredient, unit price, price, tare weight, sell-by-date, taste-by-date, department name, barcode (UPC, EAN), target weight, special message, advertising message, shop name & logo, extra print format, wrapping conditions, etc.	
Power Source:	Single Phase, 220 - 240VAC, 50Hz, 1.8kw	
Dimensions (mm):	1060 (W) x 982 (D) x 1530 (H)	
Net Weight:	Approximately 360kg	

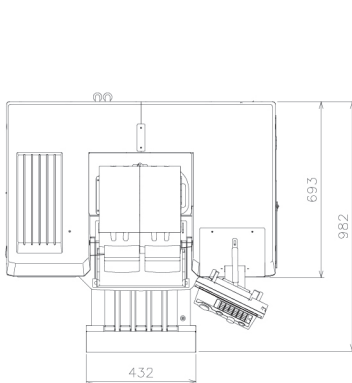

Top View

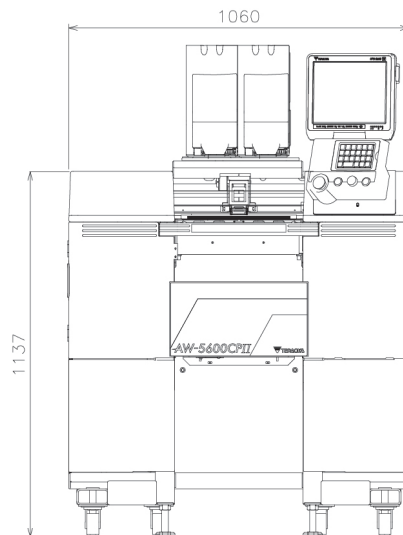

Front View

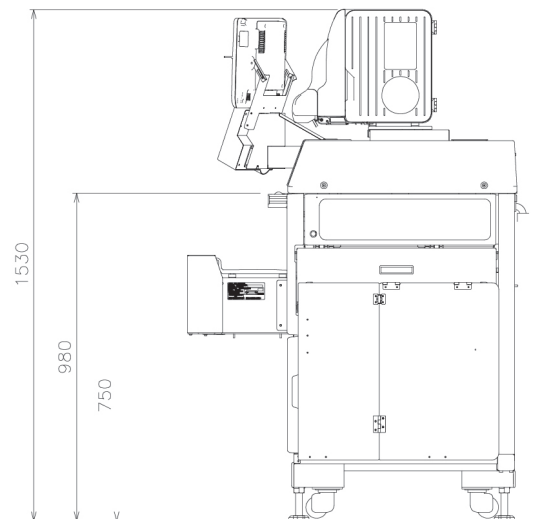

Side View

Specifications may change without notice.

Wedderburn®
Since 1896.

Packaging Equipment.

Labels. Labelling Equipment. Packaging Equipment. Weighing Scales.
POS Systems. Food Equipment. Maintenance & Repairs. Hire.

Phone: 1300 970 111

enquiries@wedderburn.com.au

www.wedderburn.com.au