

# Wedderburn®

Since 1896.



## Integrated Semi-Auto Weigh Wrap Price Labeller

AW5600FX2 Series



# AW5600FX2 Integrated, Semi-Automatic Weigh Wrap Price Labeller supports prepackaging and complex wrapping needs.

The AW5600FX2 delivers an enhanced Pick-Pack System. With more powerful air supply, widened impulse heating system and a new object detect sensor, the superior wrapping finish is even better than in previous models. The AW5600FX2 will wrap product as gently as if it were being wrapped by hand whether a uniform or irregular shape and with or without trays. You will achieve clean, tidy and cost effective wrapping and labelling that enhances the appeal of products once they reach the store shelf.

Legal for trade use in Australia, the AW5600FX2 is ideal for backroom operations where efficient and accurate weighing, price calculating and labelling of products is valued.

## 15" Large full colour touch screen


### ▲ User-friendly operator screen improves efficiency

Preset and frequently used function keys can be assigned for quick access. Size, colour and location can be changed to suit your operation.

Label content can be previewed on the display prior to printing to prevent labelling errors.

Extremely large memory easily supports an ever-increasing need for print items.

The screen angle is adjustable to ensure good viewing for all operators and lighting conditions.

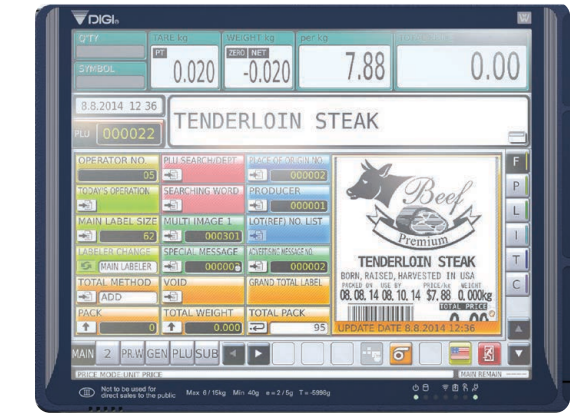

## Featuring Linerless Labelling

A new dimension for backroom operations.  
Eliminate liner waste, increase flexibility and profit

### ▲ No more wasted white space on big labels

The auto-label-sizing feature eliminates unused space on the label and automatically adjusts the label size. This reduces the label cost and makes labels more attractive.

### ▲ Increased flexibility in label format

The auto-cut feature cuts from a continuous strip of linerless labels every time a label is printed. Variable label layouts and sizes can be printed from a single cut.

### ▲ No more label lining to dispose of

The elimination of backing paper for labels means no liner to dispose of which improves your environmental footprint.

## Flexible wrapping capability

### ▲ Wrap with or without trays as gently as if wrapping by hand

Not limited to normal trays, the AW5600FX2 is also capable of wrapping fragile or irregular shaped trays, or even products without trays. The AW5600FX2 will drastically reduce the need for a cumbersome hand wrapping operation.



## Smart Labelling

### ▲ New 80mm width 300dpi thermal head

The new 300dpi thermal head enables clear and crisp label printing for enhanced consumer appeal. The 80mm print width allows more information to be included on labels so that labelling regulations are met while still keeping attractive advertising messages.

### ▲ Easy label change

The AW5600FX2 has a very simple spooling structure for the label roll. This allows for quick, easy exchange of label rolls in the front-loading labeller.

### ▲ Optional second labeller

A twin labeller option is available for printing sales promotional labels, helping enhance the presentation of commodities being wrapped.

## AW5600FX2 Series




## AW5600FX2 Features Overview

- NMI approved for trade use
- small footprint that saves valuable floor space
- easy to use with large 15" full colour touch screen and on-screen help messages
- capable of wrapping trays up to 130 mm high
- weighs, wraps, prices and labels efficiently at a speed of up to 17 packs per minute
- temperature control feature and wide impulse heater results in superior film sealing
- wide 300dpi thermal head allows more detail to be printed on labels up to 80mm wide
- engineered to use new environmentally conscious linerless labels
- free-layout function keys allow users to customise the key layout
- fast PLU file communication via Ethernet
- contact parts such as the weighing platter can be easily accessed and removed for thorough cleaning so that excellent hygiene standards can be maintained
- film loading can conveniently be done from the front of the machine
- RF Capable for a cable-free environment
- optional second labeller

Specifications may change without notice

## SPECIFICATIONS & DIMENSIONS

Capacity:	6 / 15kg x 2 / 5 g (multi-interval)	
Package Size (mm):	80 - 350 wide 10 - 130 high 80 - 230 deep  the maximum combination of the above dimensions is not available and the available package size depends on the film width.	
Wrapping Speed:	max. 17 packs per minute	
Number of Film Rolls:	One	
Film Width (mm):	350 - 500	
Label Type :	Thermal Paper/Die Cut	Thermal Paper /Linerless
Label Width (mm):	25-80mm	44-59mm
Label Length (mm):	20-150mm	20-500mm (300mm is printable)
Display Panel:	15 inches TFT colour	
Keypad:	Pictogram or English	
Programmable Items:	PLU no., commodity name, ingredient, unit price, price, tare weight, sell-by-date, taste-by-date, department name, barcode (UPC, EAN), target weight, special message, advertising message, shop name & logo, extra print format, wrapping conditions, etc.	
Power Source:	Single Phase, 220 – 240VAC, 50Hz, 1.8kw	
Dimensions (mm):	800 (W) x 936 (D) x 1429 (H)	
Net Weight:	Approximately 250kg	

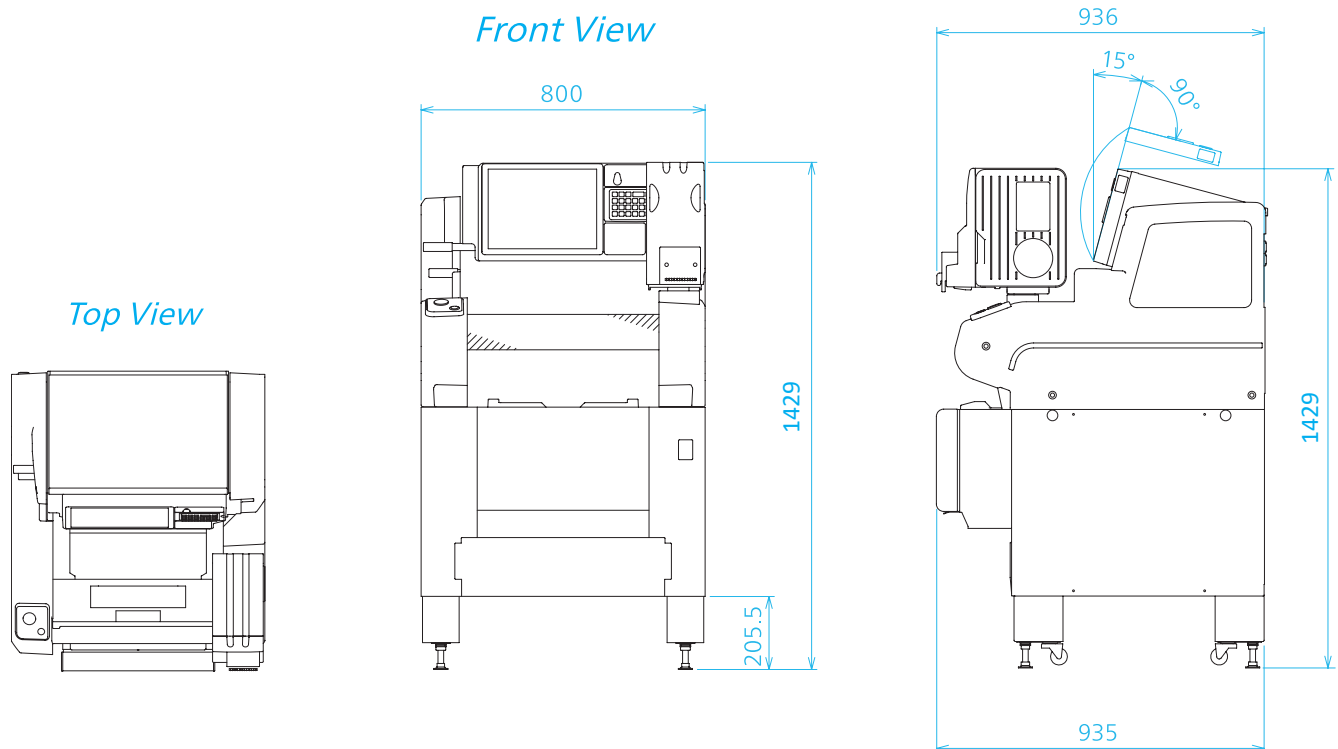

Specifications may change without notice.

**Wedderburn®**  
Since 1896.

**Packaging Equipment.**

Labels, Labelling Equipment, Packaging Equipment, Weighing Scales,  
POS Systems, Food Equipment, Maintenance & Repairs, Hire.