

Digital Crane Scale with Optional Remote Display

Model : WS601RF

The WS601RF crane scale weighs up to 15 ton and is composed of a transmitting crane scale and various receiving weight indicators for overhead weighing and tension tasks (indicators detailed on page 2). This crane scale delivers safe, precision and efficient weighing solutions for any industrial environment that prohibits operator access or visibility to the scale hook.

FEATURES

WS601RF

- super bright 45 mm high red LED display
- cast aluminium alloyed housing
- patented load cell & overload protection design
- 360 degree swivel hook
- safe overload of 250 % of rated capacity
- ultimate overload of 500 % of rated capacity
- built-in rechargeable battery, up to 150 hours usage
- low battery power indication
- high accuracy up to 1/3000
- remote controller (as pictured)

OPTIONAL ACCESSORIES

- variety of RF remote displays or display/printer all with 100 metre range



VARIATIONS

Model Number	Max Capacity	Graduation	Overall Dimensions (mm)
WS601RF5T	5,000 kg	2 kg	270 (W) x 205 (D) x 813 (H)
WS601RF7.5T	7,500 kg	2 kg	270 (W) x 205 (D) x 945 (H)
WS601RF10T	10,000 kg	5 kg	270 (W) x 205 (D) x 945 (H)
WS601RF15T	15,000 kg	5 kg	270 (W) x 205 (D) x 1180 (H)

Specifications may change without notice

WS6RF15005A HANDHELD RF WEIGH INDICATOR

- black LCD 12 mm display with backlight
- power: "AA" size 1.5 V alkaline battery, 6 pcs (not included)
- up to 100 hours operating time, depending on backlight use
- key functions: ON/OFF, HOLD, TARE, NET/GROSS, MODE, ZERO
- selectable automatic power-off for power setting



WS6RF1018A LARGE DISPLAY RF WEIGHT INDICATOR

- wall mounted design
- RED 45 mm high LED display
- key functions: ON/OFF, HOLD, TARE, NET/GROSS, MODE, ZERO
- power: 220 V AC
- optional RS232C output, remote controller



WS6RF1023A LARGE DISPLAY RF WEIGHT INDICATOR

- wall mounted design
- RED 58 mm high LED display
- key functions: ON/OFF, HOLD, TARE, NET/GROSS, MODE, ZERO
- power: 220 V AC
- optional RS232C output, remote controller



WS6RF1040A SUPER LARGE DISPLAY RF WEIGHT INDICATOR WITH REMOTE CONTROLLER

- wall mounted design
- RED 100 mm high LED display
- remote keypad functions: ON/OFF, HOLD, TARE, NET/GROSS, MODE, ZERO
- power: 220 V AC
- optional RS232C output, remote controller




WS6RF1106A PRINTER TYPE RF WEIGHT INDICATOR

- large easy to read LCD display
- power: 220 V AC
- printer: impact dot matrix
- type size: 5 x 7 dot, 2.4 mm high, 24 characters per line
- printing speed: approx 1.7 lines / sec
- paper size (mm): 57 (width) x 60 (length) x 60 (diameter)
- weight data: DATE, PART NO., HIGH/LOW LIMIT WEIGHT, AUTO M+, TARE WEIGHT, NET WEIGHT, GROSS WEIGHT, TOTAL WEIGHT
- accessories: one ink ribbon, one paper roll
- optional RS232C output



DIMENSIONS

Capacity (kg)	5T	7.5T, 10T	15T
A	270	270	270
B	205	205	205
C	813	945	1180
D	90	110	150
E	120	150	175
F	40 x 32	45 x 36	60 x 50
G	38	45	70
Net Weight (kg)	30	44	80

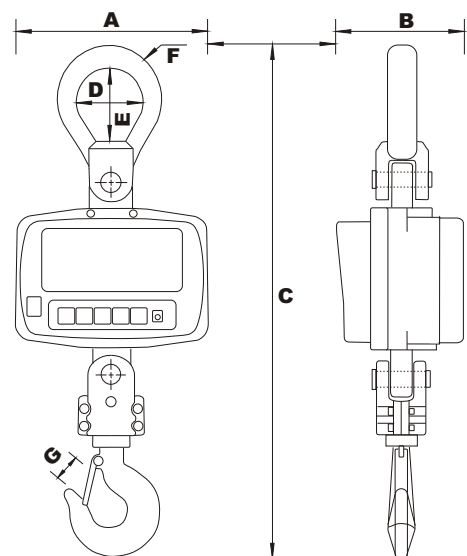

Specifications may change without notice