

Food Slicer

Model : GFEU3370

High quality manual gear-driven slicer. Very modern design and easy to use. Ideal for Australia's leading Butchers, Delis and Meat Processors.

FEATURES

GFEU3370

- high quality materials and finish
- hygienic external sharpener
- safety features meet CE requirements
- reliable and robust gear drive
- high calibre German engineering
- modern attractive low profile design for ease of use
- state of the art electronic switches for safety and reliability
- large carriage and product holder
- 330 mm blade diameter
- 450 watt high power motor
- 10 Amp single phase power

SAFETY FEATURES

- blade safety ring: the blade is completely shrouded by a metal safety guard.
- safety interlock: the carriage interlock does not allow tilting of the carriage unless the index knob is set to zero. This prevents the blade from being exposed whilst cleaning, thereby reducing risk of injury.
- power fail safe: if mains power fails and is resumed, the slicer will not start until the slicer "on" button is re-selected by the operator. There is no risk of the slicer starting inadvertently.
- no blade removal required: a large gap between the blade and motor housing allows easy access behind the blade for cleaning. There is no need for an operator to remove the blade.
- CE Approved: this means the highest standards of design and manufacture have been adhered to for optimal level of safety for the user.



SPECIFICATIONS

Model Number	Blade Diameter (mm)	Slice Thickness (mm)	Overall Dimensions (mm)
GFEU3370	330	0-24	445 (W) x 585 (D) x (H)

Specifications may change without notice

SPECIFICATIONS

GFEU3370

Product Capacity (mm)

Maximum diameter (round): 220

Maximum diameter (rectangle): 290 (L) x 240 (H)

Maximum slice thickness: 24

Dimensions (mm)

Blade Diameter: 330



Footprint: 445 (W) x 585 (D)

Working area required: 950 (W) x 835 (D)

Motor: IP65 rated water resistant

Switches: IP69 rated water resistant

Weight: 45kg

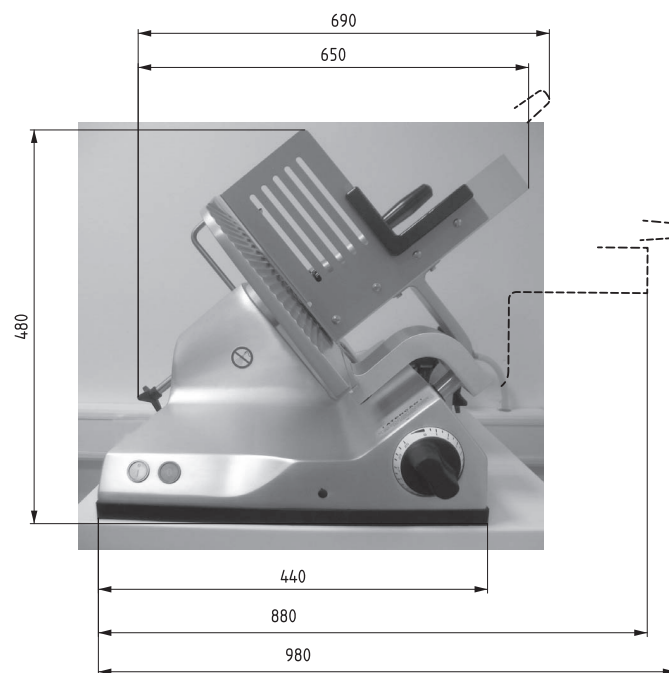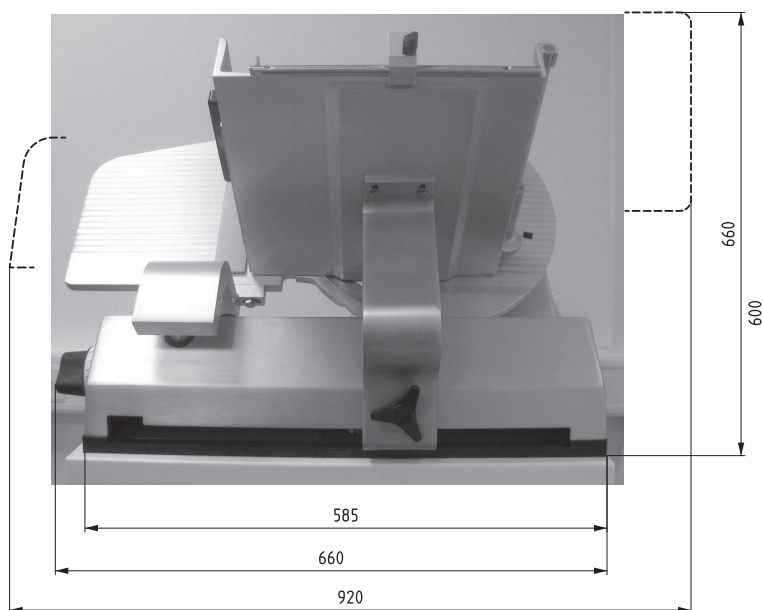

Specifications may change without notice