

# PC Based High Speed In-Line Weigh Labeller

Model : TSHI701

Increase your throughput with the HI701 high speed in line weigh labeller.  
With PC touch screen operation and modular design it will grow with your business.

## FEATURES

TSHI701

- NMI approved for trade use
- user friendly, full colour TFT touch screen display
- printing by 108mm wide, 300 DPI thermal head providing high print resolution and true type window print fonts
- modular 304 stainless steel open frame design conveyor, enhanced ease of cleaning and hygiene, IP-65 rated
- quick release conveyors & belts, removed easily without tools
- under/over setpoint linked to label print on in-range products (selectable for each PLU)
- on board help screens & videos include programming, label roll changes, maintenance and fault finding
- Windows XP embedded, 20Gb hard drive, 256 M Ram, Intel Celeron processor
- USB memory back up

## OPTIONS

- additional top or bottom labellers for promotion or supplementary labels to show ingredients or similar information. Up to 5 labellers in combination max
- interchangeable V deck conveyors for round shaped products
- long scale conveyor versions for items up to 475mm in length
- WS Stick "n" Sleeve labeller for single label application to top, side and bottom of trays
- power drop flap conveyor, single or twin sweep arm rejectors
- 80mm, 300 DPI thermal head
- TSHI700.NET back office data maintenance controlling software via Ethernet network

## SPECIFICATIONS

Capacities:      3 kg x 1 g  
                      6 kg x 2 g



*Specifications may change without notice*


# PC Based High Speed In-Line Weigh Labeller

Model : TIH701

## ADDITIONAL SPECIFICATIONS

TSHI701

Package Size	Length: 80 - 300mm Width: 40 - 250mm Height: 180mm Maximum
Label Size	Minimum: 30mm wide x 28mm high Maximum: 120mm wide x 150mm high
Label Roll	300mm outside diameter, 76mm core, inside or outside wound
Label Application	by 9 finger touch applicator
Print Method	direct thermal, 300 DPI or 12 dots/mm
Operating Speed	90 packs/min for 100mm high label speed is dependent on label length and printer information
HDD Capacity	20GB
Power Requirements	240V AC 50 Hz single phase
Air Requirements	Minimum 4 bar at 50 to 300 litres/min external clean, dry air
IP Protection	Console: to IP65 standard Labeller: to IP43 standard Conveyor: to IP65 standard
Operating Temp.	0 to +40 degrees celsius
Operating Humidity	15 to 85% RH

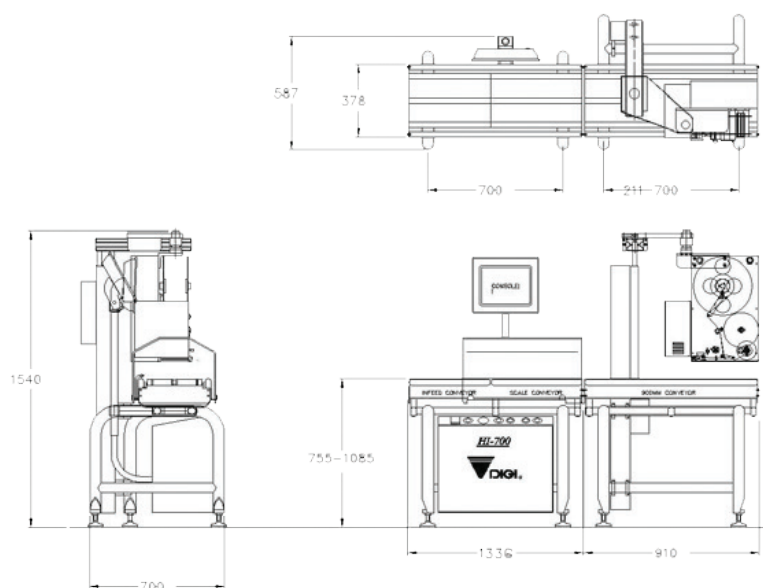

Specifications may change without notice

▲ Labelling Equipment.

Labels. Labelling Equipment. Packaging Equipment. Weighing Scales.  
POS Systems. Food Equipment. Maintenance & Repairs. Hire.