

Semi-Auto Bench Tray Sealer

Gas Purging

Model : WFT85BCG11

The perfect solution for ready meals, fresh meat and other packaged food items. This semi-automatic tray sealer is designed to seal a wide variety of food trays and can extend a product's shelf life through Modified Atmosphere Packaging (MAP), which purges the package with gas and reduces residual oxygen to very low levels. Equipped with motor driven gear box for smoother tool lifting and film cutting motion, this also eliminates the need for an external compressed air system.

By choosing a Wedderburn tray sealer, you are assured the highest quality machine backed by our nationwide network of service.

FEATURES


WFT85BCG11

- semi-automatic sealing and cutting operation
- easy to use slide in drawer with handle and protection plate for added operator safety
- 304 stainless steel construction
- touch screen, programmable control system
- option of inter-changing sealing plate/tool to customize
- automatic film recovery
- fault real time prompting function
- 4 - 5 cycles per minute production capacity
- professional edge trim cut finish with peel lip handle
- low gas pressure alarm

SPECIFICATIONS

Max Tray Dimensions (mm):	380 (W) x 230 (D) x 70 (H)
Film Size (mm):	430 (W) x 220 (max roll diameter)
Electrical Load:	1.5kW / 230V / 10Amp Single Phase / 50Hz
MAP Gas Pressure Requirement:	4 - 6 bar
Net Weight:	100 kg
Machine Dimensions (mm):	705 (W) x 850 (D) x 800 (H)
Shipping Dimensions (mm):	750 (W) x 900 (D) x 850 (H)

TRAY SPECIFICATIONS

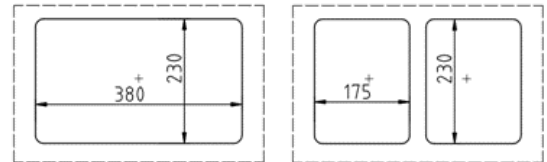

Specifications may change without notice