

# Continuous Band Sealer

Model : WFCBSH14

Our stainless steel horizontal continuous band sealing machines speed up production and make light work out of sealing plastic bags and film. The embossing attachment enables lot coding to be applied in the seal. These reliable machines are engineered for many industries including; food, medical, cosmetics and componentry.

## FEATURES

WFCBSH14

- suitable for sealing small packages
- durable stainless steel construction
- easy to use as the operator only needs to feed the bags or material into the machine
- temperature controller ensures consistent temperature throughout the operation for quality sealing
- temperature can be adjusted to suit the job at hand
- conveyor belt speed regulation
- sealing direction is left to right
- distance between the between conveyor and sealer can be adjusted to suit the item currently being sealed

## OPTIONS

- vertical model available upon request (WFCBSV14)





*Specifications may change without notice*

SPECIFICATIONS

WFCBSH14

Machine dimensions (mm):	840 (W) x 380 (L) x 270 (H)
Sealing width (mm):	8
Distance from Sealer to Conveyor (mm):	10 - 40
Temperature range (°C):	0 - 300
Conveyor size (mm):	840 (W) x 153 (D)
Max. conveyor loading	
Single Package:	1 kg
Total Load:	3 kg
Voltage:	AC 220/50 Hz
Net weight:	32 kg

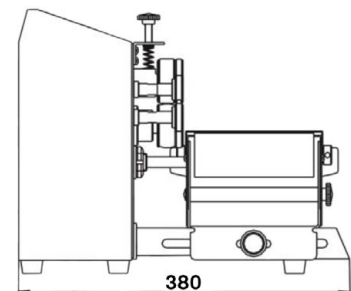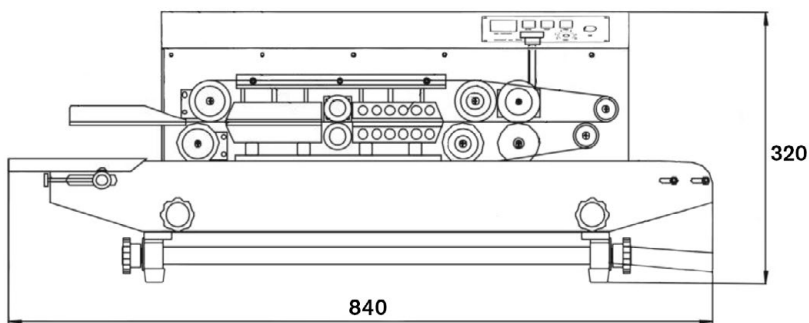

*Specifications may change without notice*